


Measuring for Skreenz to fit over rain guards

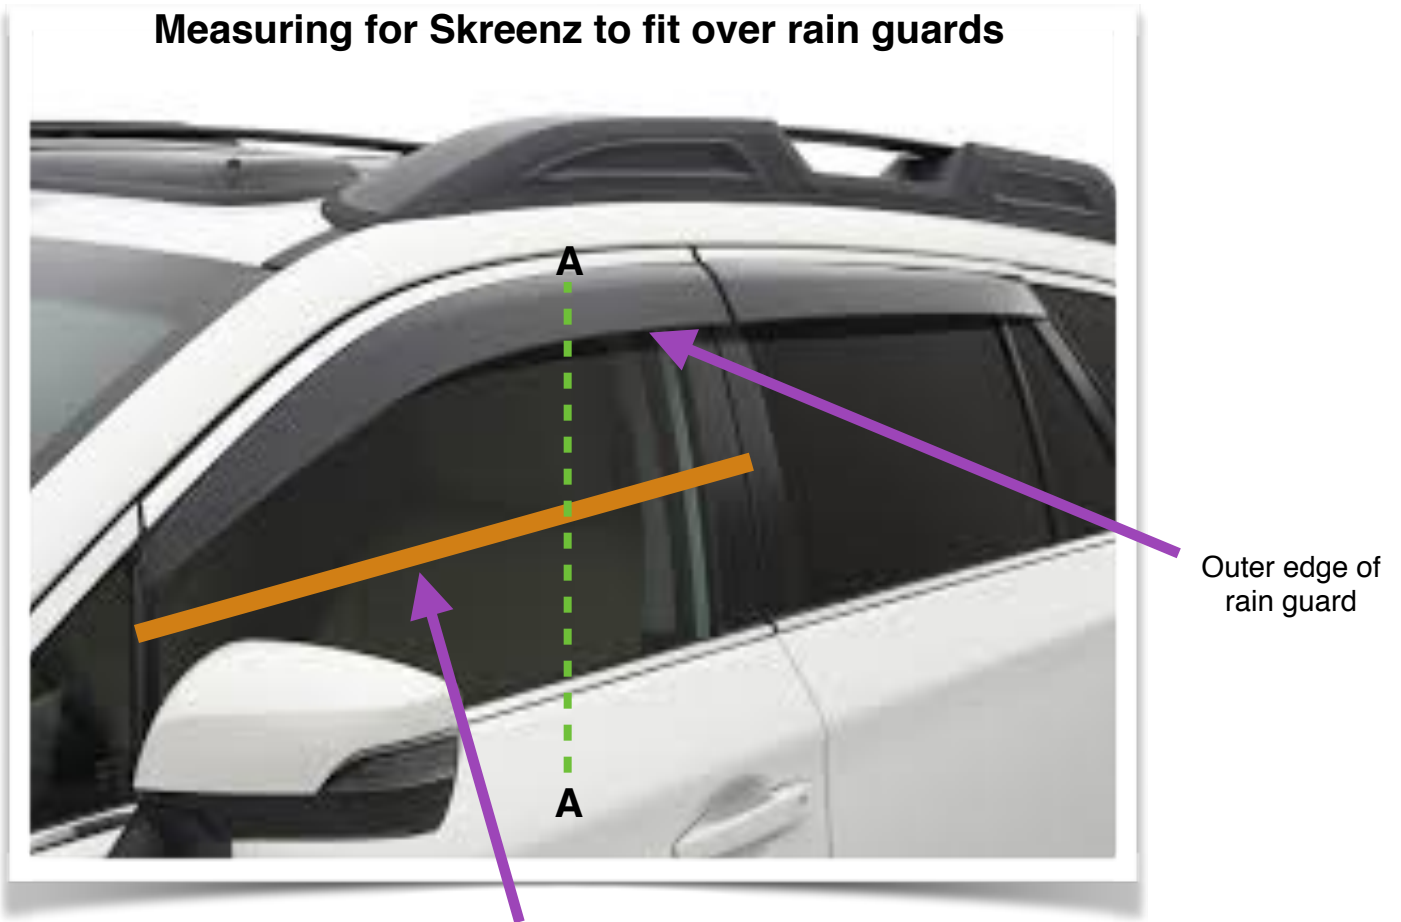

Lay a straight edge like a yardstick (gold line) across the door frame just below the rain guard.

